

EXAMPLES OF OTHER USES

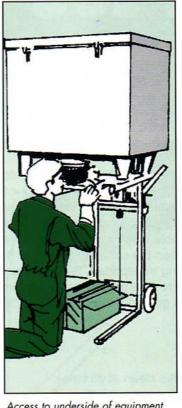


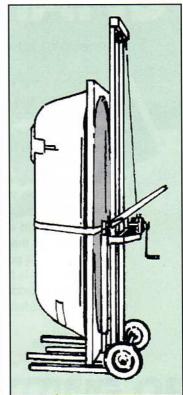





Access to underside of equipment for repairs.

Moving a bath.

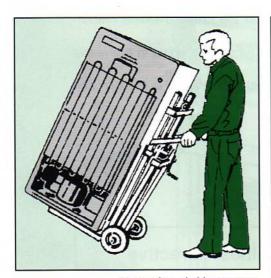


Moving household equipment.

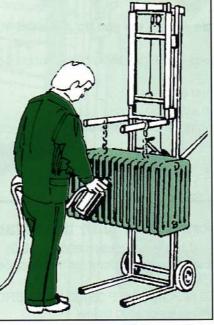

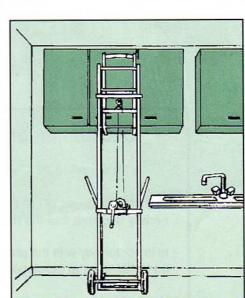

Positioning of kitchen units.

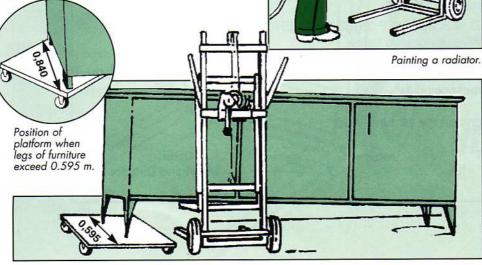

Moving furniture even widths of 0.80 m.